

**INSTALLATION**

Your ParcelWirx unit is designed to be freestanding with no manufactured anchor points. A simple way to ensure more security is to weigh the unit down from the inside with something like a sand bag, which will keep your unit in place. If you wish to anchor your new ParcelWirx unit for added security, below are additional installation options. **Please note, no anchor hardware is included with your original purchase.**

**SUGGESTED HARDWARE**

Your ParcelWirx unit **does not** include mounting hardware. If you wish to secure the unit through the bottom, we recommend purchasing 1 set of the following from your local hardware store:



**GROUND MOUNTING**


The ParcelWirx Delivery Box should be installed in a place that the delivery couriers can easily access. If you are installing with the back side near a wall/structure, allow for at least a 3" clearance on the Premium version for the lid to hinge open.

**AT YOUR FRONT DOOR (On A Concrete Slab or Deck)**

Tools required: Drill, drill bit, pencil, 4 x masonry floor bolts & washers or wood screws (not included)

1. Pre-drill holes through the bottom in the indicated locations below. Place the Parcel Delivery Box on the floor in the desired location.

From inside, mark with a pencil the location of holes on the concrete or deck.

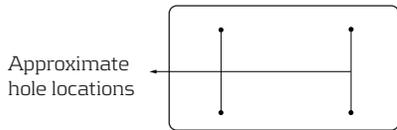

2. Remove the Parcel Delivery Box and drill the 4 holes to correct diameter and depth.
3. Place the Parcel Delivery Box over the holes, insert the floor bolts/washers or screws and tighten.
4. Ensure that the Parcel Delivery Box is firmly in place.

**DELIVERY INSTRUCTIONS FOR COURIERS**

When making a purchase:

- Add delivery instructions where possible to advise the courier to use the parcel box

**WARRANTY**

ParcelWirx comes with a 1-year limited warranty from time of purchase. Proof of purchase required.